


User Manual

LED 100W Spot Moving Head



This manual contains important information.
Please read before operating fixture.

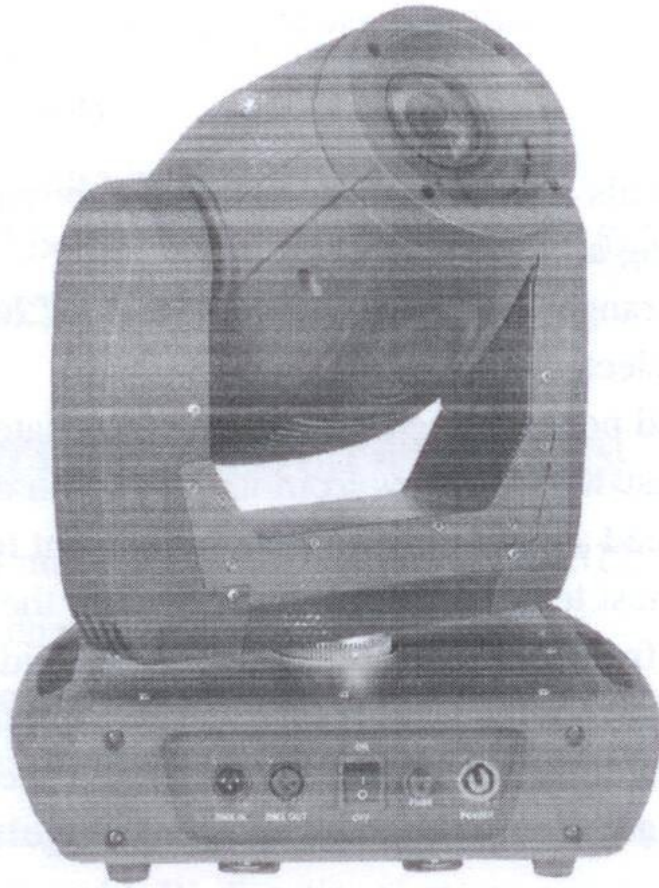

5 DMX CHANNEL SHEET

Channel Mode

12CH	16CH	Function	Channel Value	Function
	CH1	self-setting Program	0-15 16-45 46-75 76-105 106-135 136-165 166-195 196-225 226-255	No action Internal running 1 Internal running 2 Internal running 3 Internal running 4 Internal running 5 Internal running 6 Internal running 7 Internal running 8
CH1	CH2	Pan	0-255	0-540°
CH2	CH3	Tilt	0-255	0-270°
	CH4	Pan Fine Tilt	0-255	Pan Fine
	CH5	Tilt Fine	0-255	Tilt Fine
CH3	CH6	X, Y speed Adjustment	0-255	From fast to slow
CH4	CH7	LED Dimmer	0-255	From dark to bright
CH5	CH8	LED Strobe	0-7 8-250 251-255	Turn on Strobe from fast to slow Turn off
CH6	CH9	Color: 7several+ White Lighting	0-15 16-31 32-47 48-63 64-79 80-95 96-111 112-127 128-255	Color 1 Color 2 Color 3 Color 4 Color 5 Color 6 Color 7 Color 8 Color flow from fast to slow

CH7	CH10	7 Static Gobos + Open	0-7	Open
			8-15	Gobo 1
			16-23	Gobo 2
			24-31	Gobo 3
			32-39	Gobo 4
			40-47	Gobo 5
			48-55	Gobo 6
			56-63	Gobo 7
			64-71	Gobo 7 shake speed from slow to fast
			72-79	Gobo 6 shake speed from slow to fast
			80-87	Gobo 5 shake speed from slow to fast
			88-95	Gobo 4 shake speed from slow to fast
			96-103	Gobo 3 shake speed from slow to fast
			104-111	Gobo 2 shake speed from slow to fast
112-119	Gobo 1 shake speed from slow to fast			
120-127	Open			
192-255	Gobo positive and negative running from slow to fast			
CH8	CH11	7 Rotating Gobos + Open	0-15	White Lighting
			16-31	Gobo 1
			32-47	Gobo 2
			48-63	Gobo 3
			64-79	Gobo 4
			80-95	Gobo 5
			96-111	Gobo 6
			112-127	Gobo 7
			128-191	Wheel CW Fast > slow
			192-255	Wheel CCW Fast >slow

CH9	CH12	Gobo Indexing Rotation	0-15 16-95 96-115 116-135 136-155 156-175 176-215 216-255	Stop Gobo Fine 0-360 Gobo Rotating 0-90 Gobo Rotating 0-180 Gobo Rotating 0-360 Gobo Rotating 0-720 Gobo self-rotating CW from slow to fast Gobo self-rotating CCW rotating from slow to fast
CH10	CH13	Focus	0-255	focus from near to far
CH11	CH14	Prism	0-63 64-255	Open Prism In
CH12	CH15	Prism Rotation	0-15 16-136 137-255	Stop Rotate CW slow > fast Rotate CCW slow > fast
	CH16	Reset	250-253	Reset